



HM01RF Wireless Programmable Thermostat Pairing Instructions

- 1) Turn the Wireless Wiring Centre **ON**.
- 2) After inserting the batteries, turn the Thermostat **OFF**.
- 3) Press and hold the **TIME** button and then press the **POWER** button. The Advanced Settings page will now be seen.
- 4) Press the **MODE** button until **SNP 00** is showing, change this to read **01** using the **UP** button.

(00 = Inactive 01 = Active)
- 5) Press the **MODE** button and ensure **FAC 08** is shown, then press the **POWER OFF** button.
- 6) Within 10 seconds, press and hold the **DOWN** button and then press the **POWER** button.

SN1 and a Flashing Number will now be showing.
- 7) Using the **UP & DOWN** buttons enter the first 2 digits of the 14 digit Barcode number, found in the Wireless Wiring Centre, then press **MODE** to get **SN2** and enter the second 2 digits. Repeat this process to **SN6**.
- 8) After the sixth 2 digits are entered, press **MODE** again. **CHh** will now show the last 2 digits of the Barcode number.
- 9) Press **MODE** again to go to **VAL** and enter the number of the Zone Valve to be controlled, eg, **02**.
- 10) Press **MODE** again to go back to the home screen, and test by increasing the SET TEMP to 2 degrees above the ROOM TEMP. After approx. 3 seconds the selected Zone Valve Relay will operate.